
PATIO DOOR SCREEN INSTALLATION AND ADJUSTMENT INSTRUCTIONS

Please read these instructions completely before you begin.

Caution: Work safely with tools, always wear safety glasses

- (1) Thoroughly clean sill (bottom track) and head frame channel (top track) where screen will ride.
- Orient the screen such that the handle lock is towards the inside of the house. Screen can be inverted for correct handle placement of either left hand or right hand orientation.
- (3) If guides (optional) are needed, insert two anti-rattle guides into the top of the patio door screen. Place one at each end, distanced between the roller location and the top corner of door screen.
- (4) Position patio door screen into the door by lifting it up into the door frame head channel, and swinging the bottom of door over top of and down onto, the door sill roller track. If your door is equipped with a vinyl type bug seal, trimming may be necessary to achieve a proper fit.
- (5) If binding occurs or screen does not operate smoothly, move the screen to the point where it binds and adjust the roller adjustment screws on the top and/or bottom rollers. Turning the screws in a clockwise manner will force the door away from the roller. Enough tension must be kept on the rollers to keep the bottom rollers on the track when patio door screen is in operation.


NOTE: Roller track can be lubricated with a silicone lubricant. DO NOT use oil based lubricants on the track.

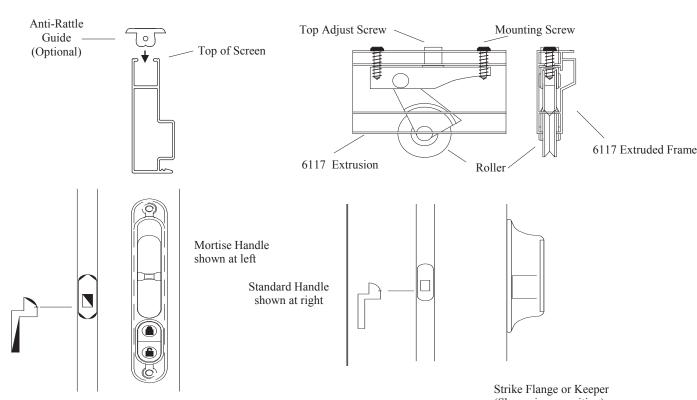

PATIO DOOR SCREEN STRIKE INSTALLATION INSTRUCTION

- (1) Close screen into door frame and mark the position to install the strike. Latch must be positioned at or above the scored line of strike flange. Note: Mortise handle right hand door shown above. Strike must be inverted for mortise handle left hand door.
- (2) If there are no pre-existing holes, drill two screw holes for attaching the strike to the frame of the door.
- (3) The strike is slotted for adjustment allowance, either up or down. Adjust strike so that positive latching occurs before tightening.

Note: When securing keeper do NOT over-tighten screws or cracking may occur.

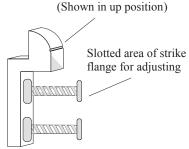

PD50001629 Revised 10/12/11

Installer: Please save these instructions for homeowner.