# Installation Instructions for Double Doors with Track and Fascia

#### Before You Begin:

Read these instructions completely before installation. Work safely with tools and always wear safety glasses. Tools needed: Safety Glasses, Phillips Screwdriver, Putty Knife, and Hacksaw. Track is predrilled and screws are provided.

# Step 1: Assemble Header Track

- Check that aluminum header track fits between jambs (between jamb and mullion for triple door units). If not, cut to fit. For 6 9/16" jambs, fascia is not used (go to step 2.).
- Check that aluminum fascia fits between brickmold (between brickmold and narrow section of mullion spacer for triple door units). If not, cut to fit.
- Slide fascia onto outer leg of header track until header track is centered on fascia (See figure 1).

### Step 2: Install Header Track

- Place header track assembly against jamb according to your jamb width (See figure 2).
- 4 9/16" jambs—fascia is flush with brickmold, 5 1/4" jambs—fascia leg abuts end of jamb, 6 9/16" jambs—do not use fascia; header track inset 1" from end of jamb. Fasten header track with #6x3/4" flat head screws provided.

## Step 3: Patio Door Screen Installation:

- Install inner screen in front of passive door. Select the screen without the woolpile seal, and orient such that the handle lock is towards the inside of the house. The handle should face jamb or mullion of passive door. Rotate screen 180 degrees to correct handle orientation.
- Tilt top of screen forward and place top rollers onto the inside top screen track. Swing bottom of screen against the inside sill screen track. Use a putty knife to lift the bottom rollers up and onto the inside sill screen track.
- If binding occurs, move screen to point of where it binds and adjust the roller adjustment screws on the top and/or bottom rollers. Turning the screws in a clockwise manner will force the door away from the roller. Enough tension must be kept on the roller to keep the bottom rollers on the track when patio door screen is in operation.
- See reverse side for patio door screen strike installation.

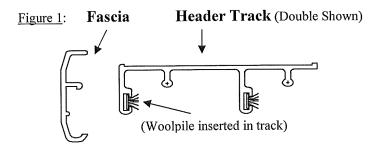


Figure 2:

